


FS-273S

**OPERATION MANUAL  
SELF PROPELLED AERIAL PLATFORM  
MODEL SR210/ISR700**

**Applied to specification: E1(CE), F1**

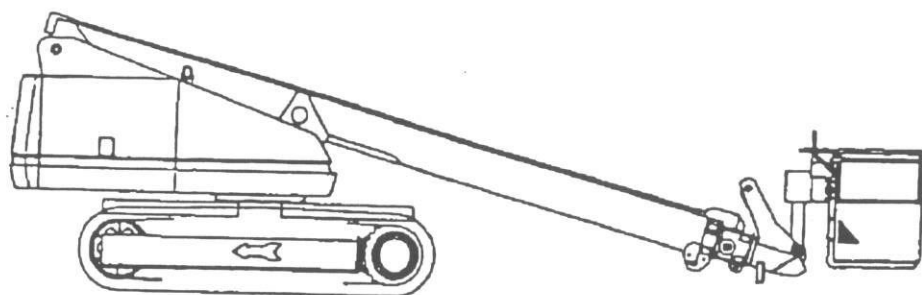

\* Important : Please read this manual before operating the machine.

**///NACHI**  
CORPORATION

1152 RYOKE, AGEO, SAITAMA, JAPAN

## Introduction

Thank you very much for making your purchase from Aichi Corporation.

This manual describes the correct operation and handling procedures for the self propelled aerial platform (SR210/ISR700). Reading and reference to this manual will ensure the maximum operational efficiency of this machine.

Operation of this machine not in accordance with the instructions in this manual may lead to problems, resulting in damage and increasing risk of danger. Please, be sure to read and understand this manual before using this machine.

- \* Always keep this manual and the record of Aichi pre-delivery functional tests with the machine.
- \* When you transfer the use or ownership of the machine, please attach this manual to the machine for the next user.
- \* For any doubts you may have about handling, inspection or spare parts, please do not hesitate to contact our business offices or the authorized service shop nearest to you. In this case, you are requested to quote the model, serial number, manufactured date marked on the serial number plate.
- \* Use only the spare parts approved by the manufacturer, particularly for load-supporting and safety-related components.
- \* Do not make any modifications to the machine without obtaining the manufacturer's approval. The design check, the manufacturing check as well as the practical tests should be conducted by the approved agent, if a modification which would affect the stability, strength or performance of the machine is made. Detail of major alterations or repairs must be recorded in the service manual.
- \* The user of this machine shall obtain the guidance and approval of the manufacturer, in the event of any special working method or conditions which are outside those specified by the manufacturer.
- \* Your attention is called on certain changes in illustration or contents which may be made without notice.

# INDEX

I	QUALIFICATION OF OPERATOR	1
II	SPECIFICATIONS	2
	1. Main specifications	2
	2. Working range	4
III	REGULAR INSPECTION	5
IV	FOR SAFETY PURPOSE	6
	1. Before starting operation	6
	2. During operation	10
V	NAME OF EACH PART	21
VI	COMPONENTS	22
	1. Hydraulic pressure generating device	22
	2. Boom rotation device	22
	3. Boom elevation device	23
	4. Boom extension device	23
	5. Platform rotation device	24
	6. Platform levelling device	24
VII	CONTROL PANEL	25
	1. Lower control panel	25
	2. Upper control panel	26
VIII	PRE-START INSPECTION	27
IX	SAFETY DEVICE	31
X	POSITIONING OF MACHINE	32

XI	OPERATION METHOD	33
1.	Engine start operation	33
1.1	Engine start operation from lower control	33
1.2	Engine start operation from upper control	36
2.	Engine stop operation	37
3.	Lower control (operation from ground)	38
3.1	Accelerator operation	38
3.2	Boom elevating operation	38
3.3	Boom rotation operation	39
3.4	Boom extension operation	39
3.5	Emergency stop operation	40
3.6	Emergency pump operation	41
3.7	Platform level adjustment method	42
3.8	Air bleeding method from platform levelling system	43
4.	Upper control (operation from the platform)	44
4.1	Foot switch	44
4.2	Accelerator operation	44
4.3	Travelling operation	45
4.3.1	Matters that demand special attention	45
4.3.2	Operation method	46
4.4	Boom elevating operation	48
4.5	Boom rotation operation	48
4.6	Boom extension operation	49
4.7	Platform rotation operation	49
4.8	Platform level adjusting operation	50
4.9	Emergency stop operation	51
4.10	Emergency pump operation	52

4.11 Alarm horn operation	53
4.12 Work light operation	53
XII OPERATION POINTS	54
XIII CAUTION AFTER FINISHING WORK	56
1. When the work is finished	56
2. Transportation	57
XIV LUBRICATION	59
1. List of recommended lubricants	59
2. Lubrication chart and interval	60
XV DAILY CARE	62
1. Hydraulic oil	62
1.1 When replenishing	62
1.2 Hydraulic oil change (once a year)	63
2. Gear oil for "Rotation gear box"	64
2.1 Inspection	64
2.2 Gear oil change (once a year)	64
3. Gear oil for "Travel gear box"	65
4. Fuel	66
5. Engine	67
6. Wire rope	68
7. Fuse	69
8. Hydraulic hose	70
9. Crawler	71
9.1 Adjustment method	71
9.2 Adjustment interval	73
XVI CAUTION FOR LONG TERM STORAGE	74
XVII DECALS	76

# I Qualification of Operator



The operator of this machine must receive safety training to ensure safe operation.

## Safety training

Incorrect use of the machine may cause serious danger.

All personnel who operate this machine are requested to receive safety training, and only the trained and authorized personnel are allowed to operate this machine.

(For safety training, use this manual.)

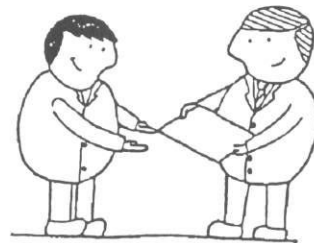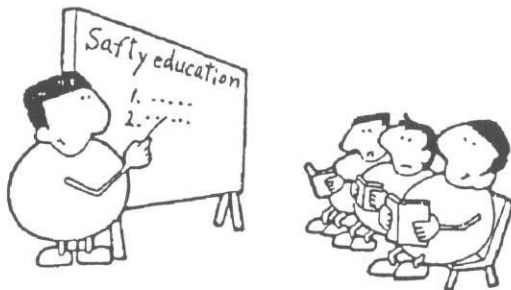

Certificate of training course completion

Let's implement safety education!